

Instructions for setting up a Roku player:

- Use an HDMI cable (included in the kit) and connect one end to the HDMI port on the back of the Roku player and the other end to an open HDMI port on your TV.




- Next, power on your Roku player by connecting it to a wall outlet using the included power adapter.
- If you use a wired network, connect one end via an Ethernet cable (not included in the kit) to the Ethernet port on the back of your Roku player and other end to an open Ethernet port on your router.
- If your TV doesn't display a Roku screen, press the input button (sometimes called a source) on your TV remote to cycle through the various video inputs available until you see a Roku screen.



- Press "OK" when prompted to continue to set up your network. If you are using a wired connection, simply select "Wired Connection" in the next screen; otherwise, select "Wi-Fi connection." If you selected "Wi-Fi connection," the next screen will display the wireless networks the Roku3 has detected. Select the desired wireless connection and press "OK."



- In the next screen, you can enter the network password. Once you have entered the password, the Roku 3 will connect to the network.

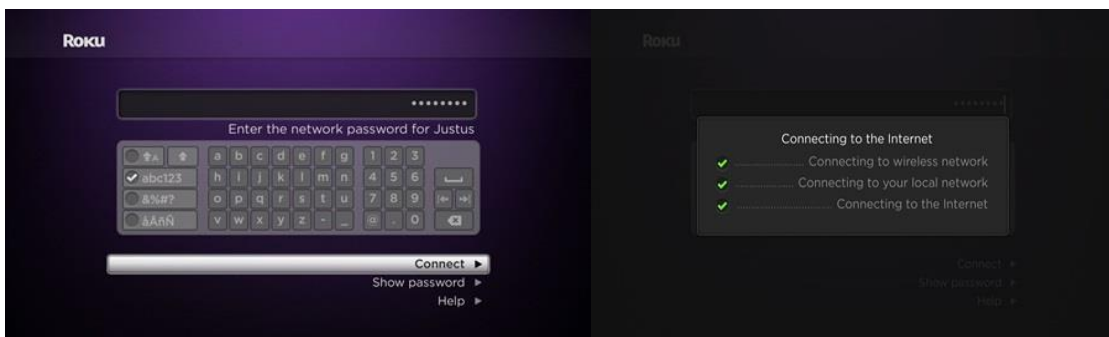

- Once connected, you will arrive at the Roku home screen and start streaming your favorite channels like Netflix and Vudu. Both Vudu and Netflix are linked to the library account. For information on instructions on Vudu and Netflix channels visit our website www.billericalibrary.org/roku

